

## Guarantee

---

Please keep this Guarantee Card in a safe place

Model:..... Serial No: .....

Purchase Date: ..... Dealer: .....

Opticron Natura BGA ED binoculars are of a very high quality both in their performance and construction.

We guarantee some parts in these instruments for up to 30 years under the following conditions:

- (i) In the case of defects attributable to faulty processing or materials, we will assume responsibility for the labour and material costs during the first 10 years after purchase. We reserve the right to decide whether defective parts should be repaired or replaced.
- (ii) During the next 20 years we will assume responsibility for material costs only, charging corresponding labour costs.
- (iii) We will accept no liability for damage caused by incorrect use, water penetration - unless the binocular is specified to be waterproof, or for any repairs or actions which have been carried out outside our firm.
- (iv) Parts such as carrying straps, rubber eyecups, rubberised coatings etc. are excluded from the guarantee.

This guarantee is in addition and does not affect your statutory rights.

**Registration.** If you would like to register your purchase with us please visit [www.opticron.co.uk](http://www.opticron.co.uk) and complete the online Product Registration Form. Alternatively please telephone us during normal working hours on the numbers given. We will need the product name and serial number (if applicable), purchase date and outlet, your name and postcode. Registration is voluntary and failure to register will not diminish your rights under the guarantee.

**Privacy.** Opticron takes your privacy seriously and we do not share personal information with other companies.

**Contact us.** Address: Opticron, Unit 21, Titan Court, Laporte Way, Luton, Bedfordshire, LU4 8EF, UK  
Phone: +44 (0)1582 726522 Fax: +44 (0)1582 723559 Email: [sales@opticron.co.uk](mailto:sales@opticron.co.uk)

# opticron

## Natura BGA ED User Instructions and 30 Year Guarantee



**Models**  
**8x32**  
**8x42**  
**10x42**

NATURAED1216

## User Instructions

---

Binoculars can be a useful companion when travelling, going to sporting and leisure events or used as part of a hobby such as birdwatching or astronomy. To help you get the best results from your equipment please read the following instructions carefully.

### Adjusting to obtain a single picture


To adjust to the spacing of your eyes simply rotate the two sides of the binocular around the centre hinge until a single rounded picture is obtained when looking through both eyepieces.

### Adjusting for maximum sharpness

Many people have slightly different vision between their eyes. When using binoculars, this difference can be easily compensated for by setting the dioptre adjustment located above the focusing wheel.

**To set the binoculars correctly**, close your right eye and look through the left eyepiece with your left eye and using the centre focus wheel - focus on an object of your choice until it is clear and sharp. Next, close your left eye and look through the right eyepiece with your right eye. You may find the object being viewed is not absolutely sharp and this can be corrected by pulling out and rotating the dioptre adjustment wheel (but without turning the centre focus wheel) until the object being viewed becomes sharp. Push down dioptre adjustment wheel to lock in position. The binoculars are now set and a perfectly clear and sharp image should be attainable when using both eyes together. To focus at different distances simply rotate the centre focus wheel.

**Rubber Eyecups** are designed to position your eyes correctly to get the maximum comfortable field of view with or without glasses and are often unique to each individual binocular.

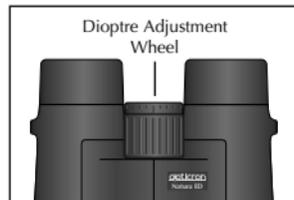

## User Instructions

---

### Wearing glasses

Opticron Natura BGA ED binoculars are designed to provide the full field of view when wearing glasses. To maximise field of view with glasses on, twist down the eyecup assemblies - remembering to return them to the upright position if you or anybody else wants to use them without glasses.

### Care and cleaning

Binoculars require little maintenance but occasionally the outside surfaces of the eyepieces and objective lenses will need cleaning. To avoid damaging these surfaces please read the following carefully.

- (i) Gently remove excess dirt and dust using a compressed air device or blower brush. Caution: Hard and persistent rubbing of dirty surfaces can cause abrasive scratches on the surface of the glass which may distort viewing.
- (ii) Breathe on exposed glass surface and then wipe with an optical cleaning cloth (code 30277) in a circular motion until the surface is clean again.

Do not attempt to dismantle the instrument as this will invalidate the guarantee.

### Cold weather

In cold weather the external lens surfaces may steam up when moving the instrument from cooler air outside to warmer air inside. If this occurs, leave the instrument to stand for a few minutes until any condensation evaporates.

**WARNING** Never under any circumstances use a binocular to view the Sun. Doing so will cause serious damage to your eyes.

We hope you will get a great deal of pleasure from your new Opticron binocular. If you have any problems or damage the binocular in any way our Service Department is on hand to help you.